



## FLR-U5 SERIES

In line medium pressure filters

In line filters for operating pressure up to 30 bar.  
Flow rate up to 2600 l/min.




|                             |   |
|-----------------------------|---|
| <b>HOUSING</b>              | tested according to NFPA T3.10.5.1, ISO 10771, ISO 3968   |
| <b>PRESSURE:</b>            | Max operating: 30 bar<br>Fatigue rating: 10 <sup>6</sup> cycles 0÷30 bar<br>Burst: 90 bar   |
| <b>CONNECTIONS:</b>         | 3" - 4" SAE 3000 FLANGE   |
| <b>MATERIALS:</b>           | Head: anodized aluminium<br>Bowl: anodized aluminium<br>Body: anticorodal aluminium<br>Seal: NBR (FKM on request)                                       |
| <b>BYPASS VALVE:</b>        | inbuilt in the filter element<br>no bypass<br>1 bar<br>3 bar<br>4 bar<br>6 bar  |
| <b>ELEMENT</b>              | tested according to ISO 11170, 2941, 2942, 2943, 3724, 3968, 16889, 16908, 23181  |
| <b>FILTER MEDIA:</b>        | Fibreglass: G01 - G03 - G06 - G10<br>G15 - G25 - G40 - GW03 - GW10<br>AW40  |
| <b>COLLAPSE PRESSURE:</b>   | 10 bar  |
| <b>TEMPERATURE RANGE:</b>   | with NBR seal<br>from -30 °C to +100 °C<br><br>with FKM seal (OPTION)<br>from -25 °C to +120 °C   |
| <b>FLUID COMPATIBILITY:</b> | Full with HH-HL-HM-HV<br>HETG-HEES (acc. to ISO 6743/4).<br>For use with other fluid please<br>contact Filtrtec Customer Service<br>(info@filtrtec.it). |

For more information:

WEB: FLTR.com.au PHONE: (+61) 1300 62 4020 EMAIL: info@FLTR.com.au


# OVERALL DIMENSIONS

## A Version

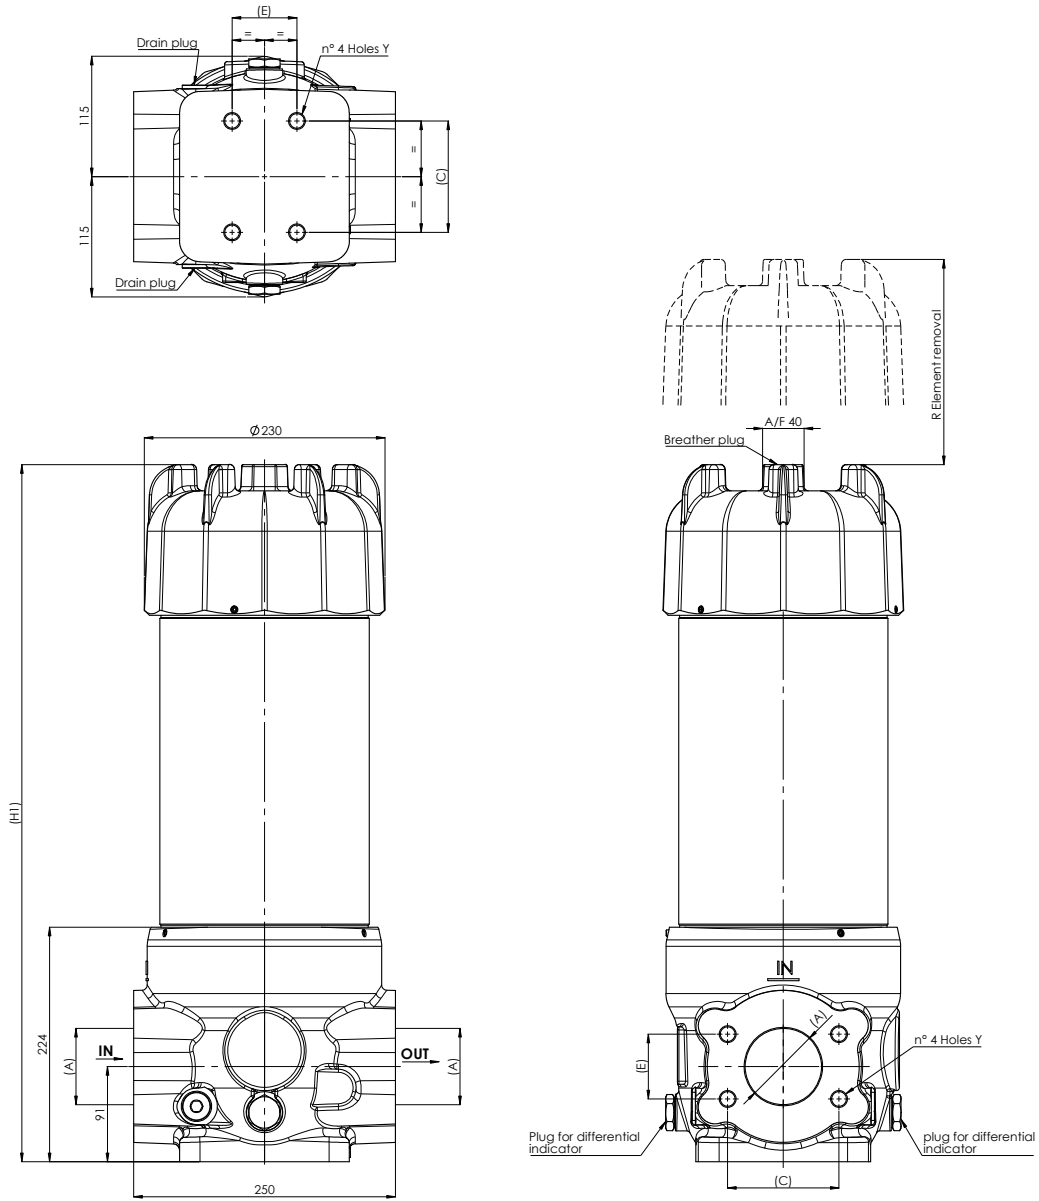

## OVERALL DIMENSIONS

### B Version

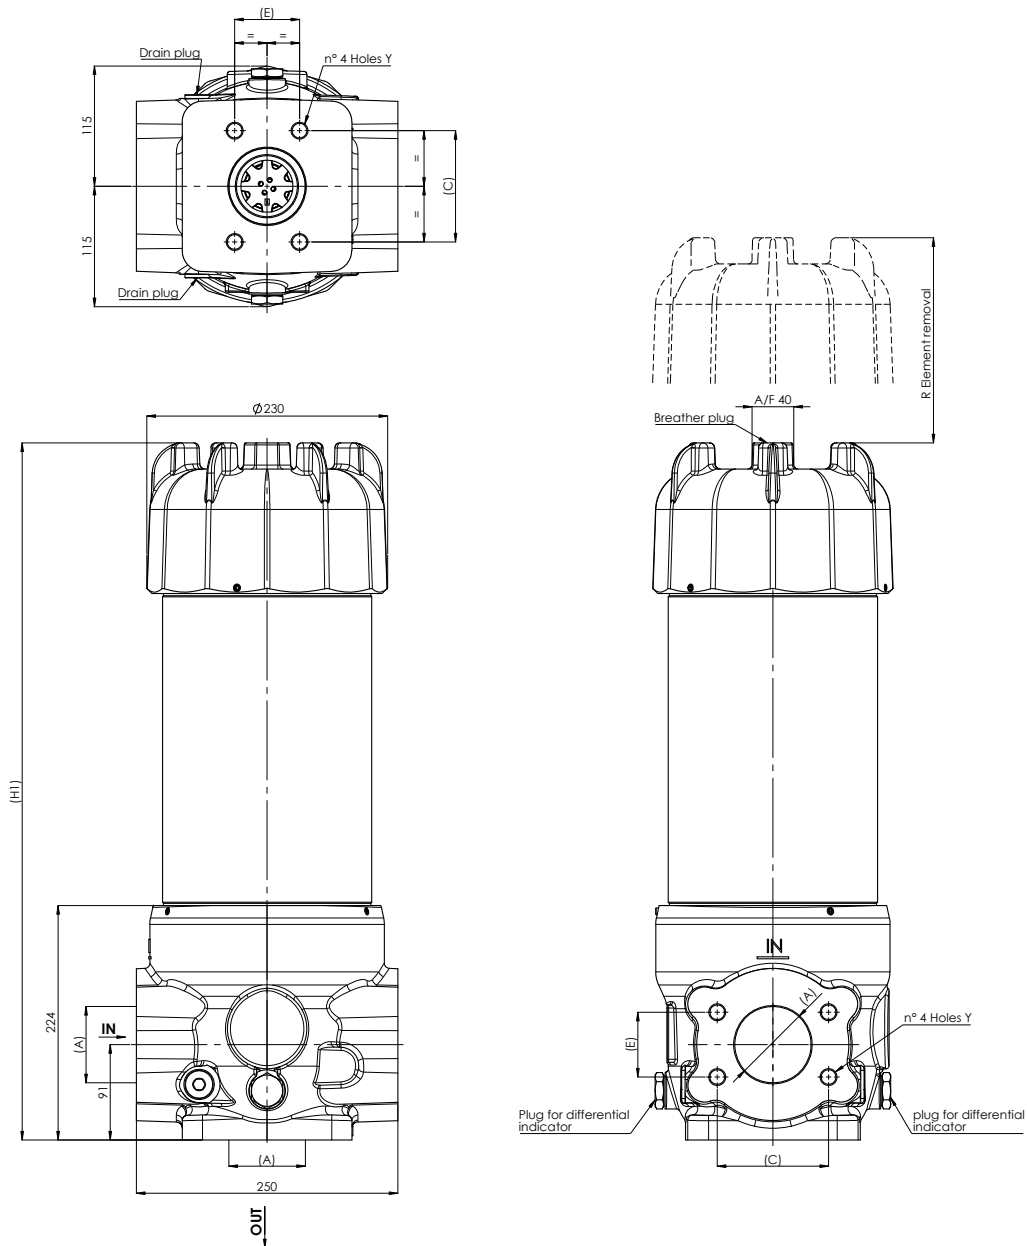

## NOMINAL SIZE

| MODEL    | PORT SIZE A          | Y        | A                | C      | E     | H1   | R   | BODY WEIGHT |
|----------|----------------------|----------|------------------|--------|-------|------|-----|-------------|
| FLR-U562 | FLANGE 3" SAE 3000-M | M16 x 24 | $\varnothing 73$ | 106,38 | 61,93 | 718  | 460 | 29 Kg       |
|          | FLANGE 4" SAE 3000-M |          | $\varnothing 99$ | 130,18 | 77,77 |      |     |             |
| FLR-U564 | FLANGE 3" SAE 3000-M |          | $\varnothing 73$ | 106,38 | 61,93 | 1156 | 900 | 35 Kg       |
|          | FLANGE 4" SAE 3000-M |          | $\varnothing 99$ | 130,18 | 77,77 |      |     |             |

For more information:

WEB: [FLTR.com.au](http://FLTR.com.au) PHONE: (+61) 1300 62 4020 EMAIL: [info@FLTR.com.au](mailto:info@FLTR.com.au)

## ORDERING INFORMATION

|               | 1.  | 2. | 3.  | 4.  | 5. | 6. | 7.   | 8. | 9. | 10. | 11. | 12. |
|---------------|-----|----|-----|-----|----|----|------|----|----|-----|-----|-----|
|               | FLR | U5 | 62  | G10 | B  | 6  | F10M | A  | 2  | 000 | A   | 0   |
| SPARE ELEMENT | U5  | 62 | G10 | B   | 6  |    |      |    |    |     |     |     |

|   |      |  |
|---|------|--|
| 1. FILTER SERIES  | FLR  |  |
| 2. FILTER ELEMENT SERIES                                      | U5   |  |
| 3. FILTER SIZE  | 62   |  |
|   | 64   |  |
| 4. FILTER MEDIA   | 000  | no element   |
| AbsoluteBeta<br><b>ULTRA HIGH CAPACITY<br/>FILTER ELEMENT</b> | G01  | glassfiber $\beta_{4\mu m(c)} \geq 1.000$  |
|   | G03  | glassfiber $\beta_{5\mu m(c)} \geq 1.000$  |
|   | G06  | glassfiber $\beta_{7\mu m(c)} \geq 1.000$  |
|   | G10  | glassfiber $\beta_{12\mu m(c)} \geq 1.000$   |
|   | G15  | glassfiber $\beta_{17\mu m(c)} \geq 1.000$   |
|   | G25  | glassfiber $\beta_{22\mu m(c)} \geq 1.000$   |
|   | G40  | glassfiber $\beta_{35\mu m(c)} \geq 1.000$   |
|   | GW03 | glassfiber $\beta_{5\mu m(c)} \geq 1.000$ + water absorbent                                      |
|   | GW10 | glassfiber $\beta_{12\mu m(c)} \geq 1.000$ + water absorbent                                     |
|   | AW40 | water absorbent only   |
| 5. SEALS  | B    | NBR  |
|   | V    | FKM  |
| 6. BYPASS VALVE   | 0    | no bypass or no element  |
| Inbuilt into the filter element                               | 1    | 1 bar  |
|   | 3    | 3 bar  |
|   | 4    | 4 bar  |
|   | 6    | 6 bar  |
|   |      |  |
| 7. MAIN PORT  | F10M | 3" SAE 3000 FLANGE   |
|   | F12M | 4" SAE 3000 FLANGE   |
| 8. PORTS LAYOUT   | A    | straight: horizontal inlet - horizontal outlet   |
|   | B    | corner: horizontal inlet - vertical outlet   |
| 9. INDICATOR PORT OPTION                                      | 1    | indicator seat on both sides:<br>left metal plug, right plastic cap                              |
|   | 2    | indicator seat on both sides with metal plug <span style="float: right;">preferred option</span> |
| 10. COMPULSORY FIELD  | 000  | filtrec standard   |
| 11. CORROSION PROTECTION                                      | A    | anodized   |
| 12. OPTION  | 0    | no option  |
|   | 1    | internal tube for low flow rate<br>150-200 LPM   |

For more information:

WEB: [FLTR.com.au](http://FLTR.com.au) PHONE: (+61) 1300 62 4020 EMAIL: [info@FLTR.com.au](mailto:info@FLTR.com.au)

## ORDERING INFORMATION

---

### ACCESSORIES

---

The accessories must be ordered separately

#### INDICATOR


(Y and F) digit for FKM seal option

\*LC24=Led connector

For other options see clogging indicators catalogue

|             |  |                                   |
|-------------|--|-----------------------------------|
| VX2 (VY2)   | differential visual 2,7bar               |                                   |
| EX2 (EY2)   | differential electric 2,7bar             |                                   |
| EX2L (EY2L) | differential electric 2,7bar + LC24*     |                                   |
| VEXF2       | differential visual and electric 2,7 bar |                                   |
| VX5 (VY5)   | differential visual 5bar                 |                                   |
| EX5 (EY5)   | differential electric 5bar               |                                   |
| EX5L (EY5L) | differential electric 5bar + LC24*       |                                   |
| VEXF5       | differential visual and electric 5bar    |                                   |
| VX8 (VY8)   | differential visual 8bar                 |                                   |
| EX8 (EY8)   | differential electric 8bar               | recommended for no by-pass option |
| EX8L (EY8L) | differential electric 8bar + LC24*       |                                   |
| VEXF8       | differential visual and electric 8 bar   |                                   |
| LC24        | LED connector for pressure switch        |                                   |
| <hr/>       |  |                                   |
| <b>PLUG</b> |  |                                   |
| P01         | metal plug for indicator port - NBR      |                                   |
| PF1         | metal plug for indicator port - FKM      |                                   |

## HYDRAULIC SYMBOLS

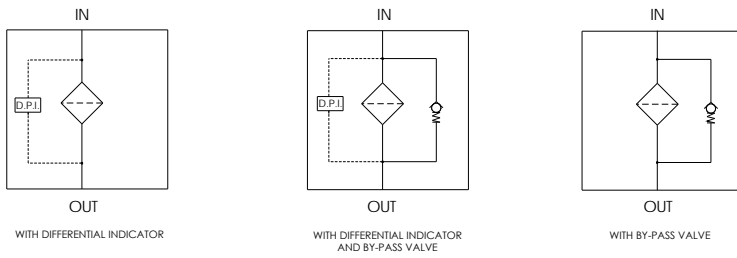


## PRESSURE DROP ( $\Delta p$ ) INFORMATION FOR FILTER SIZING

The total Delta P through a filter assembly is given from Housing  $\Delta p$  + Element  $\Delta p$ .

This ideally should not exceed 1,0 bar and should never exceed 1/3 of the set value of the by-pass valve.  
N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density 0,875 Kg/dm<sup>3</sup>.

## HOUSING PRESSURE DROP

The housing  $\Delta p$  is given by the curve of the considered model and port, in correspondence of the flow rate value.

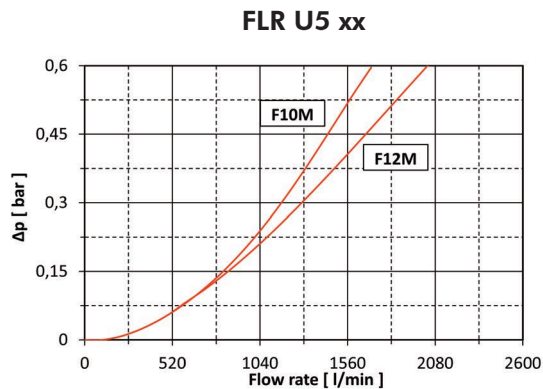

For more information:

WEB: [FLTR.com.au](http://FLTR.com.au) PHONE: (+61) 1300 62 4020 EMAIL: [info@FLTR.com.au](mailto:info@FLTR.com.au)

## ELEMENT PRESSURE DROP

The element  $\Delta p$  (bar) is given by the flow rate (l/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000.

If the oil has a viscosity  $V_x$  different than 32 cSt a corrective factor  $V_x/32$  must be applied.

1000 l/min with U564G10B and oil viscosity 46 cSt:  $(1000 \times 0.09) / 1000 \times (46 / 32) = 0,13$  bar

|             | G01  | G03  | G06  | G10  | G15  | G25  | G40  | GW03 | GW10 | AW40 |
|-------------|------|------|------|------|------|------|------|------|------|------|
| <b>U562</b> | 0,97 | 0,4  | 0,32 | 0,19 | 0,17 | 0,11 | 0,07 | 1,15 | 0,55 | 0,22 |
| <b>U564</b> | 0,45 | 0,19 | 0,15 | 0,09 | 0,08 | 0,06 | 0,03 | 0,58 | 0,28 | 0,11 |

## EXAMPLE OF TOTAL $\Delta p$ CALCULATION

FLRU5G10B0F10MA1000A0 with 1000 l/min and oil 46 cSt:

Housing  $\Delta p$  + element  $\Delta p = 0,22$  bar +  $(1000 \times 0.09 / 1000 \times (46 / 32))$  bar = 0,35 bar


## GW03, GW10 AND AW40 QUICK SIZE TABLE

|      | suggested flow rate<br>[l/min] | GW03 and GW10<br>water capacity* [l] | AW40<br>water capacity* [l] |
|------|--------------------------------|--------------------------------------|-----------------------------|
| U562 | 75                             | 1.31                                 | 1.50                        |
| U564 | 152                            | 2.65                                 | 3.03                        |

\* at final  $\Delta p = 3$  bar

## BYPASS VALVE PRESSURE DROP

The bypass valve  $\Delta p$  is given by the curve of the considered model and setting, in correspondence of the flow rate value.

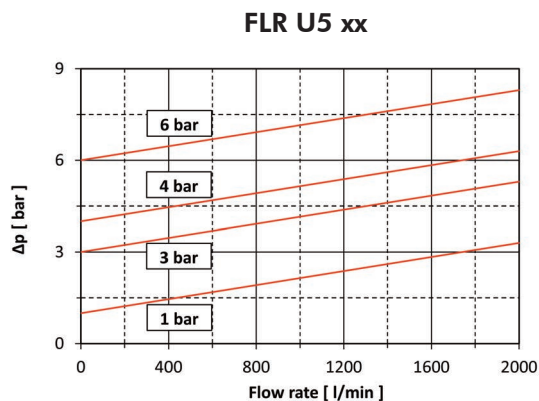


N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density 0,875 Kg/dm<sup>3</sup>.

For more information:

WEB: [FLTR.com.au](http://FLTR.com.au) PHONE: (+61) 1300 62 4020 EMAIL: [info@FLTR.com.au](mailto:info@FLTR.com.au)

## USER TIPS

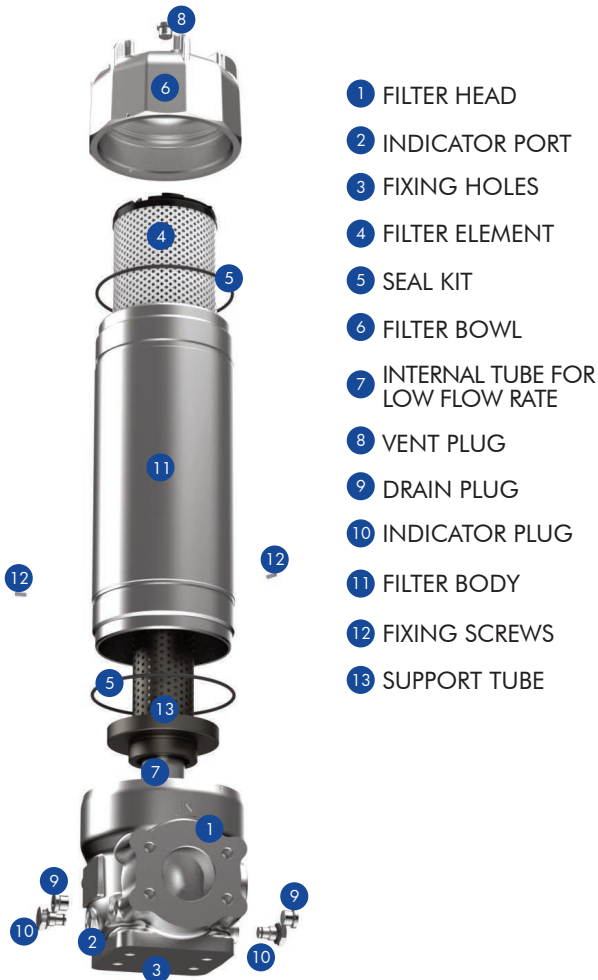

- 1 FILTER HEAD
- 2 INDICATOR PORT
- 3 FIXING HOLES
- 4 FILTER ELEMENT
- 5 SEAL KIT
- 6 FILTER BOWL
- 7 INTERNAL TUBE FOR LOW FLOW RATE
- 8 VENT PLUG
- 9 DRAIN PLUG
- 10 INDICATOR PLUG
- 11 FILTER BODY
- 12 FIXING SCREWS
- 13 SUPPORT TUBE

### INDICATOR TIGHTENING TORQUE

50 Nm

### SPARE SEAL KIT PART NUMBER (5)

|        | NBR          | FKM          |
|--------|--------------|--------------|
| FLR... | 06.021.00389 | 06.021.00390 |


### BOWL/BODY TIGHTENING TORQUE

screw up filter bowl/body till end


### DRAIN/VENT TIGHTENING TORQUE

50 Nm



## WARNING

-  Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.


## DISPOSAL OF FILTER ELEMENT

-  The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.



## INSTALLATION

-  1. The IN and OUT ports must be connected to the hoses in the correct flow direction (an arrow shows on the filter head (1)).
- 2. The filter housing should be preferably mounted with the bowl (6) upward.
- 3. Secure to the frame the filter head (1) using the fixing holes (3).
- 4. Verify that no tension is present on the filter after mounting.
- 5. Enough space must be available for filter element replacement.
- 6. The visual clogging indicator must be in a easily viewable position.
- 7. When a electrical indicator is used, make sure that it is properly wired.
-  8. Never run the system with no filter element fitted.
- 9. Keep in stock a spare FILTREC filter element for timely replacement when required.
- 10. Filter housing should be earthed.

## OPERATION

-  1. The filter must work within the operating conditions of pressure, temperature and compatibility given in the first page of this data sheet.
- 2. The filter element must be replaced as soon as the clogging indicator signals at working temperature (in cold start conditions, oil temperature lower than 30°C, a false alarm can be given due to oil viscosity).
- 3. If no clogging indicator is mounted, replace the element according to the system manufacturer's recommendations.

## MAINTENANCE

-  1. Make sure that the system is switched off and there is no residual pressure in the filter.
- 2. Loosen vent screw (8).
- 3. Remove drain plug (9) in housing bottom and drain oil.
- 4. Unscrew filter bowl counter-clockwise.
- 5. Lift out filter element (4).
- 6. Check seal on filter bowl (5). We recommend replacement in any case.
- 7. Make sure that the order number on the spare element corresponds to the order number of the filter name-plate. To ensure no contamination occurs during the exchange of the element, first open the plastic bag, then push the element over the spigot in the filter head. Now remove plastic bag.
- 8. Push the element carefully over the spigot and tighten the 3 grub screws (12) of the filter bowl (6).
- 9. Tighten drain plug (9) in housing bottom.
- 10. Tight vent screw (8).
-  11. The used filter elements can not be cleaned and re-use.

For more information:

WEB: FLTR.com.au PHONE: (+61) 1300 62 4020 EMAIL: info@FLTR.com.au